


## 4. Engine Coolant Temperature Sensor

### A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.
- 3) Disconnect the connector from the engine coolant temperature sensor.
- 4) Remove the engine coolant temperature sensor.

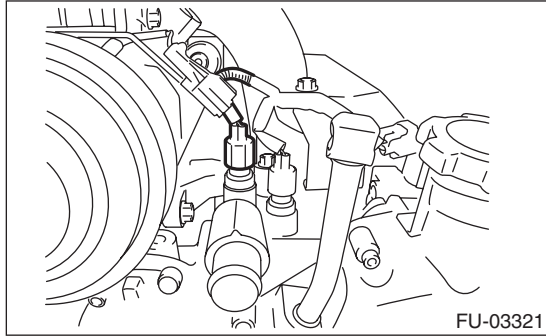

### B: INSTALLATION

Install in the reverse order of removal.

#### ***Tightening torque:***

***22 N·m (2.2 kgf-m, 16.2 ft-lb)***

